



Keys

n Electronic key



Smart access system with push-button start
(→P.8, 19)

*: If equipped

n Mechanical key



- 1 Locks and unlocks the doors
- 1 Opens the trunk
- 1 Locks and unlocks the glove box

The mechanical key is stored inside the electronic key. To extract the key, release the latch and pull, or if equipped with a card key, press the button and pull.

n Wireless remote control



- 1 Press:** locks all doors
- 2 Press once:** unlocks the driver's door
Press twice: unlocks all doors
Press and hold: opens the windows and moon roof*
- 3 Press and hold:** opens the trunk
- 4 Press and hold:** sounds the alarm
(Use the alarm to attract attention to the vehicle in order to help deter break-ins. To stop the alarm, press any button on the wireless remote control.)

*: If equipped



Smart Access System with Push-button Start

The smart access system with push-button start allows you to enter and exit the vehicle or start the engine by simply carrying the electronic key in your pocket or bag. For details on starting the engine, see page 19.

Entering the vehicle



To unlock the vehicle, simply grasp either of the front door handles.

Exiting the vehicle



To lock the vehicle, press the lock button on either of the front door handles.

Opening the trunk



To open the trunk, press and hold the trunk release button.

For details on what to do when the electronic key does not operate properly, see page 60.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



Theft Deterrent System

The theft deterrent system includes the following features to help protect your vehicle from theft.

n Engine immobilizer system



The engine immobilizer system prevents the engine from being started in the event that an attempt is made to start the vehicle using an unregistered key.

The security indicator light flashes to indicate that the system is set.

n Alarm

The system sounds the alarm and flashes lights when forcible entry is detected.

To set the alarm: lock all the doors from outside the vehicle. The security indicator light comes on to indicate that the alarm is in its preparation state. When the indicator light begins to flash, the system is armed.

To deactivate or stop the alarm: turn the "ENGINE START STOP" switch to ACCESSORY or IGNITION ON mode, or unlock the doors or trunk using the electronic key or the wireless remote control.

n Steering lock



The steering wheel locks when the "ENGINE START STOP" switch is OFF.

When the steering lock cannot be released, the green indicator light on the "ENGINE START STOP" switch will flash and a message will be shown on the multi-information display. To release it, gently turn the wheel left or right while pressing the "ENGINE START STOP" switch.